



# DUAL DISH DOLLY

## INSTRUCTION MANUAL



67366

# CASTER INSTALLATION


COMPONENTS		
ITEM NO	QTY	DESCRIPTION
1	1	Cart Body
2	2	Fixed Casters
4	2	Swivel Casters
5	16	5/16" Carriage Bolt (5/8" L)
6	16	5/16" Nut


TOOLS		
1/2" Wrench or Socket		




12 Holes - Fixed casters go on this end.

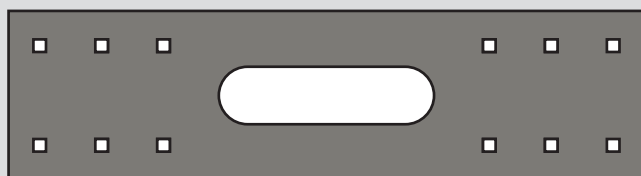


8 Holes - Swivel casters go on this end.

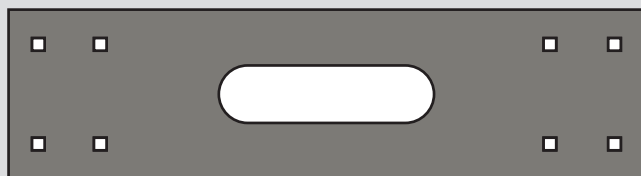

Caster placement for general use

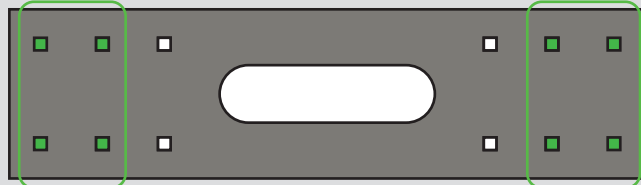

Caster placement for use with the Mantis Cart.

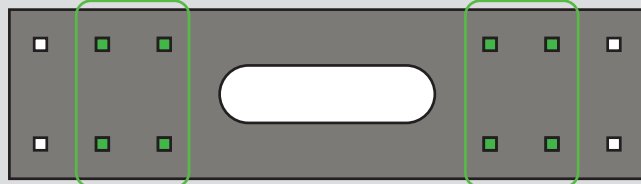

1

Note the two ends of the dish rack dolly are different. One end has 4 holes, the other has 12.

2

Install the fixed casters on the end with 12 holes. If you are using the dolly with our Mantis cart, the casters should be installed on the inner most position.



3

Install the casters using 4 bolts and nuts. Finger tighten nuts into place.



4

Tighten all of the nuts down using a 1/2" wrench or socket.