



CHURCH CHAIR CART



CONTENTS

Specs	3
Parts Diagram	4
Assembly	5

TOOLS NEEDED

- Needle Nose Pliers
- Box Cutters / Utility Knife
- Wrenches: 9/16" & 3/4"
- Sockets: 9/16" & 3/4"

MADE IN THE USA GUARANTEE



Our American made products are engineered, manufactured and assembled in Archbold, OH using USA made steel.



- Exceptional quality and service on every single product.
- Professional grade designs by our in house engineers.
- Industry leading warranties.
- Family owned and operated in the USA.

To view more products from American Cart & Rack scan the QR code with your phone or visit AmericanCartAndRack.com




WARRANTY

3 Year Limited Warranty. Carts, excluding any finishes, casters and wheels are warranted for three (3) years from date of original purchase. Casters and wheels are warranted for 90 days from date of original purchase. We will repair, without charge, any defect due to faulty material or workmanship. These warranties do not cover failures due to abuse, misuse, improper installation, accidental damage or when repairs or modifications have been made or attempted to be made by anyone other than Granite Industries. Any defective products that meet warranty specifications and Granite Industries approval, may be returned to the factory to be repaired or replaced free of charge. (Granite Industries will pay to ship replacement item(s) to the customer; however the customer is responsible for shipment of products to the factory.) This remedy is the sole remedy in contact, tort or otherwise, and Granite Industries is not liable for incidental. consequential or special damages. These warranties give you specific legal rights, and you may have other rights which vary from state to state. Should you have any questions, contact Granite Industries (Proof of purchase may be required).




Customer Service 877-447-2648 M-F, 8am - 5pm EST

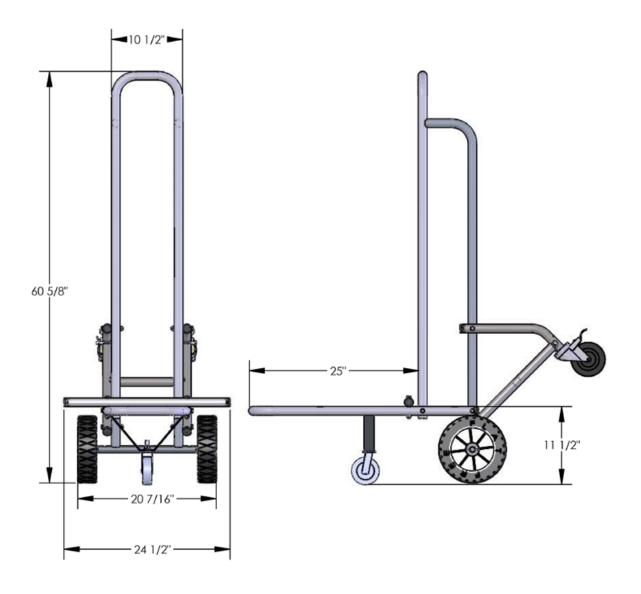

Overall Dimensions:	W:	25"	D:	53"	H:	61"
Overall Dimensions:*	W:	25"	D:	54"	H:	50"
Weight:	53 lb	os.	Сар	acity:	500	lbs.

^{*}Measurements taken on 4 wheels

PARTS DIAGRAM

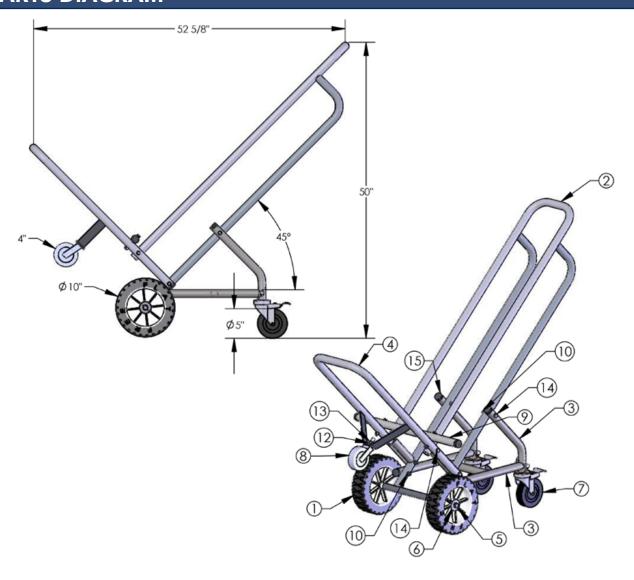

ITEM NO	QTY	PART NO	DESCRIPTION	
1	2	PI-06-0124	10" Plastic Hub Flat Free Offset Tire	
2	1	MI-12-4751	Cart Chassis	
3	1	MI-12-4752	Rear Caster Mount	
4	1	MI-12-4753	Chair Lifting Bar	
5	2	PI-01-0226	1/8" x 1 1/4" Cotter Pin	
6	2	PI-01-0451	3/4" Washer	
7	2	38057	5" Caster with 1 1/4" Stem	
8	1	PI-06-0044	4" Caster with Rubber Tread	
9	1	MI-01-5830	Chair Stop Bar	
10	10	PI-01-0019	3/8" Locknut	
11	1	PI-01-0059	1/2" Washer	
12	1	PI-01-0068	1/2" Lock Washer	
13	1	PI-01-0067	1/2" Nut	
14	10	PI-01-0100	3/8" Hex Bolt	
15	8	PI-04-0036	Cap Plug 1 1/4"	

STEP 1: REAR WHEEL ASSEMBLY

COMPONENTS				
ITEM NO	QTY	DESCRIPTION		
2	1	Cart Chassis		
7	2	5" Caster with 1 1/4" Stem		
14	4	3/8" Hex Bolt		
10	4	3/8" Locknut		

TOOLS
9/16" Wrench
9/16" Socket





Position the rear caster mount onto the cart chassis as shown. The lower part of the mount will connect to the lowest set of holes on the chassis.



Secure in place using a 3/8" hex bolt and lock nut. Repeat this for the remaining three bolts.



Insert the casters into the rear caster mount and pin into place.




STEP 2: FRONT WHEEL ASSEMBLY

COMPONENTS			
ITEM NO	QTY	DESCRIPTION	
1	2	10" Plastic Hub Flat Free Tire	
5	2	1/8" x 1 1/4" Cotter Pin	
6	2	3/4" Washer	

TOOLS

Needle Nose Pliers



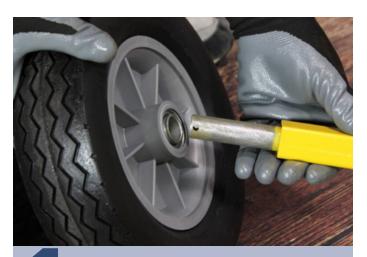

Slide the wheel onto the axle, making sure the offset side is facing inwards, toward the body of the cart.



Slide a washer onto the axle.



Then insert the cotter pin into the hole provided. Bend the cotter pin outward with a **needle nosed pilers**.



STEP 3: INSTALL LIFTING BAR

COMPONENTS			
ITEM NO	QTY	DESCRIPTION	
4	1	Chair Lifting Bar	
9	1	Chair Stop Bar	
14	6	3/8" Hex Bolt	
10	6	3/8" Locknut	

TOOLS
9/16" Wrench
9/16" Socket





Align the chair lifting bar onto the chart chassis. Make sure the wheel mount on the chair bar is pointed down towards the floor.



Secure in place using four 3/8" hex bolts and lock nuts. Tighten down using a **9/16"** wrench and socket. Repeat this for the remaining three bolts.



Place the chair stop bar onto the chair lifting bar. Secure into place using two 3/8" hex bolts and lock nuts and a 9/16" wrench and socket.

STEP 4: INSTALL FRONT CASTER

COMPONENTS			
ITEM NO	QTY	DESCRIPTION	
11	1	1/2" Washer	
12	1	1/2" Lock Washer	
13	1	1/2" Nut	

TOOLS

3/4" Socket





Insert the caster into the mount on the chair lifter bar, then slide a 1/2" washer and a 1/2" lock washer onto the caster.

