



CHIAVARI CHAIR CART

INSTRUCTION MANUAL



67164-75

CONTENTS

Specs	3
Parts Diagram	4
Assembly	5
X-Back Chair Conversion	6

TOOLS NEEDED

- Needle Nose Pliers
- Box Cutters / Utility Knife

MADE IN THE USA GUARANTEE



Our American made products are engineered, manufactured and assembled in Archbold, OH using USA made steel.



Expect more. get more.
FROM GRANITE INDUSTRIES

- Exceptional quality and service on every single product.
- Professional grade designs by our in house engineers.
- Industry leading warranties.
- Family owned and operated in the USA.

To view more products from
American Cart & Rack
scan the QR code with your phone
or visit AmericanCartAndRack.com



WARRANTY


3 Year Limited Warranty. Carts, excluding any finishes, casters and wheels are warranted for three (3) years from date of original purchase. Casters and wheels are warranted for 90 days from date of original purchase. We will repair, without charge, any defect due to faulty material or workmanship. These warranties do not cover failures due to abuse, misuse, improper installation, accidental damage or when repairs or modifications have been made or attempted to be made by anyone other than Granite Industries. Any defective products that meet warranty specifications and Granite Industries approval, may be returned to the factory to be repaired or replaced free of charge. (Granite Industries will pay to ship replacement item(s) to the customer; however the customer is responsible for shipment of products to the factory.) This remedy is the sole remedy in contract, tort or otherwise, and Granite Industries is not liable for incidental, consequential or special damages. These warranties give you specific legal rights, and you may have other rights which vary from state to state. Should you have any questions, contact Granite Industries (Proof of purchase may be required).



**GRANITE
INDUSTRIES**



Customer Service
877-447-2648
M-F, 8am - 5pm EST

SPECS

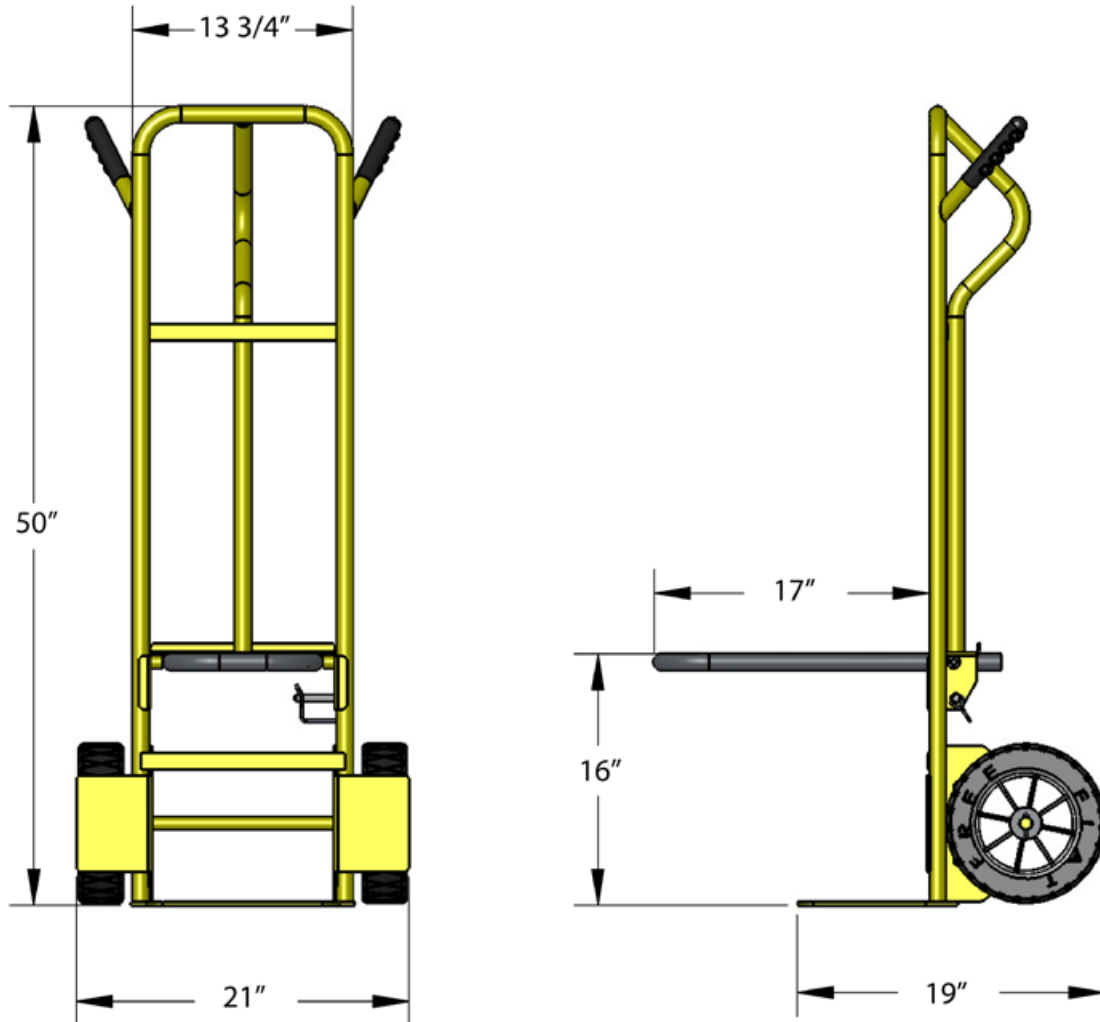

Overall Dimensions:	W: 21"	D: 28"	H: 50"
Chiavari Bar:	W: 10"	D: 17"	H: 16"
Weight:	41 lbs.	Capacity:	500 lbs.

PARTS DIAGRAM

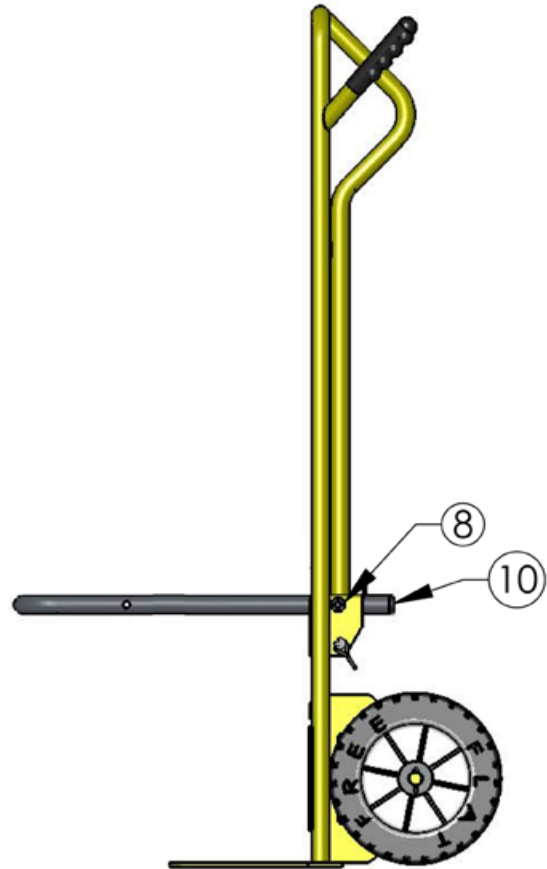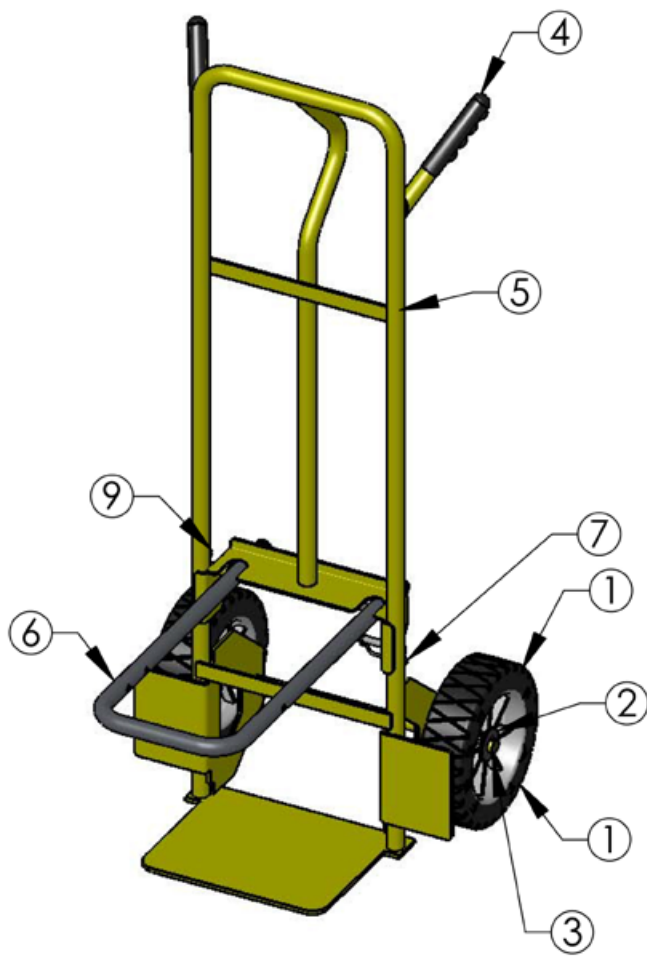

ITEM NO	QTY	PART NO	DESCRIPTION	
1	2	PI-06-0124	10" Wheel with plastic hubs	
2	2	PI-01-0451	3/4" Washer	
3	2	PI-01-0226	1-1/4" Cotter Pin	
4	2	PI-04-0109	Hand Grip	
5	1	MI-12-5008	Cart Body	
6	1	MI-01-5958	Chair Bar	
7	1	06003	2" Snap Pin	
8	1	MI-12-4964	12-1/2" Clevis Pin	
9	1	PI-01-0463	1-5/8" Hair Pin	
10	2	PI-04-0035	1" Round Plug	

STEP 1: FRONT WHEEL ASSEMBLY

COMPONENTS		
ITEM NO	QTY	DESCRIPTION
1	2	10" Wheel with plastic hubs
2	2	3/4" Washer
3	2	1-1/4" Cotter Pin
5	1	Cart Body
TOOLS		
Needle Nose Pliers		



1 Slide the first wheel onto the axle, making sure the offset side of the hub goes towards the body of the cart.



2 Slide the washer onto the axle.



3 Insert the cotter pin and secure it by bending both ends outward with a **needle nose pliers**. Repeat this process for the other side.



Your Chiavari Chair Cart is now fully assembled.

X-BACK CHAIR CONVERSION



1

Remove the hair pin from the clevis pin that holds the chair bar in place.



2

Turn the bar around and slide the rounded end back into the body of the cart.



3

Insert the clevis pin through the holes on the chair bar.



4

Secure the clevis pin in place with the hair pin.



Your Chiavari Chair Cart
is now ready to use with x-back chairs.

NOTES

Handwriting practice lines with a large, faint watermark in the center. The watermark is a stylized, geometric design resembling a combination of the letters 'U' and 'S' or a similar abstract symbol, rendered in a light gray color.

NOTES

